
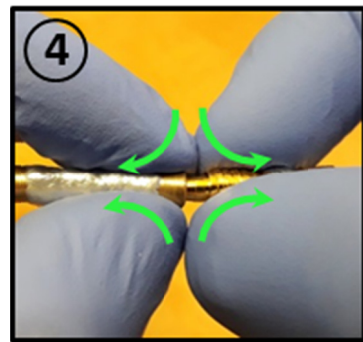
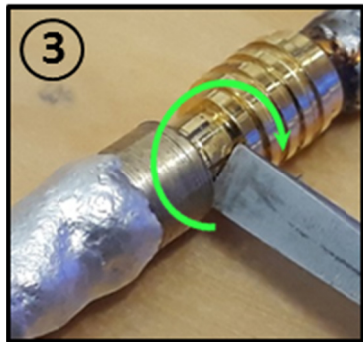
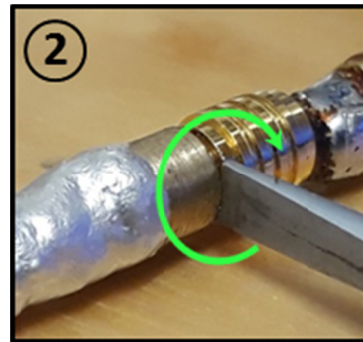


MFT safe handling instructions

MFTs are rather robust when handled correctly. However, applying large tension or torque may break off the MCX connectors and damage the MFT permanently.

- Do NOT apply tension or torque to an MFT
- Do NOT mount an MFT under either torque or tension
- Always disconnect MFTs very carefully by following the instructions shown below.

Safe filter removal procedure using a flat screwdriver:

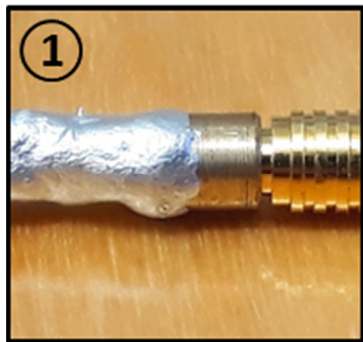

- NEVER disconnect the MFT by pulling the filter and MCX connector apart. MCX connector may break off MFT.

